





Installation - Further Steps

2nd Installation about angle valve

- take the water-line for connection between the bidet-system and the water-in
- open the water wheel and check immediately if it's leaking

3rd Installation about water connection behind wall

- take the three boards from the that you get look directly to the showing construction
- close the water while using the wheel
- use the T-connection unit (no. 6) with the special fitting (no.7)* inch,a further water-line (no.12)*
- the end you have to connect to further line (no.13)* while using a screw (no.8)*
- about the water-line (no.13) make the connection to the bidet-system
- open the water wheel and check immediately if it's leaking
- to close the wall you have to make a whole into the three boards as follows:

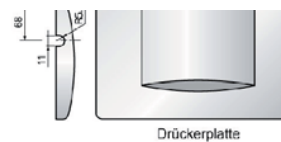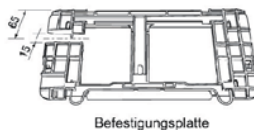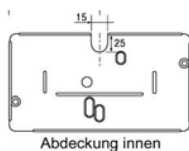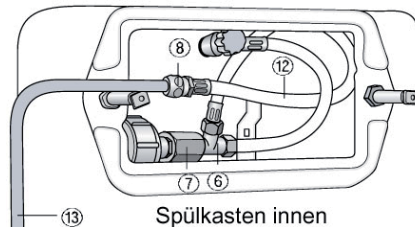

- close the wall in the reverse direction as in the beginning

*the special fitting (no.7) is not necessary with using the T-connection unit

Not included into the appurtenances are:

- water-line (no.13) - please ask your plumber
- screw (no.8) - please ask your plumber